


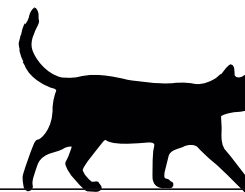


QUICK START




▶ EN/IT/ES/DE/NL/PT : <https://www.martinsellier.com/fr/sav/categories>

PRODUCT DESCRIPTION

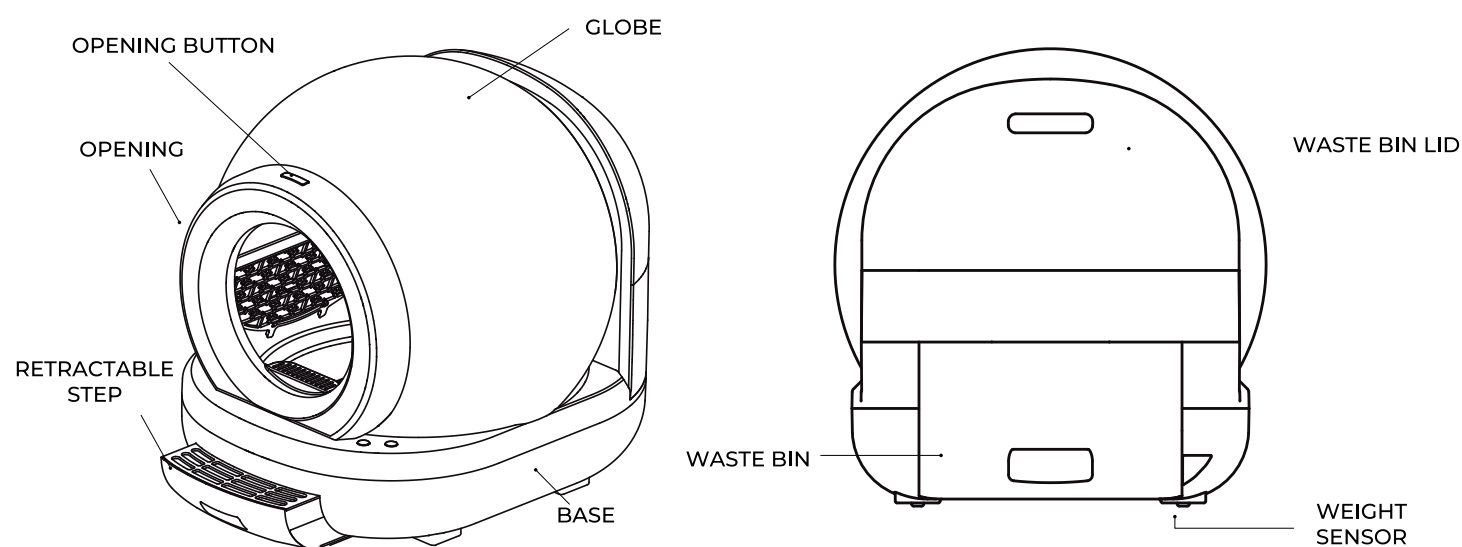


ACCESSORIES

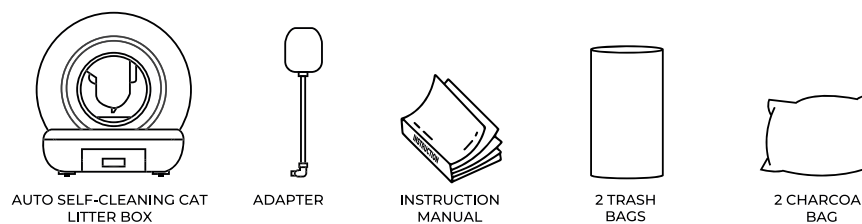


1 Placement & Power connection

Place the product on a hard and flat surface. Place the cat litter mat in front of the machine, not in contact with the machine, to avoid affecting the gravity sensor data.

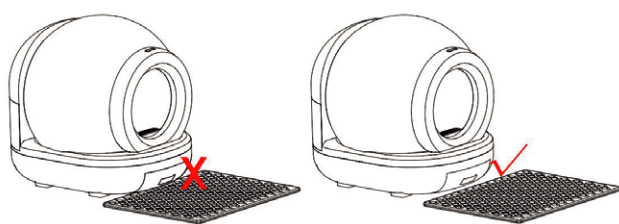


2 Put on Garbage Bag

Lift the bin lid. Take out the waste bin and put the garbage bag on it. **Note : Do not cover the infrared sensor with the garbage bag.** After replacing the garbage bag, click the CLEAN once to update the weight information and avoid failure of automatic cleaning.

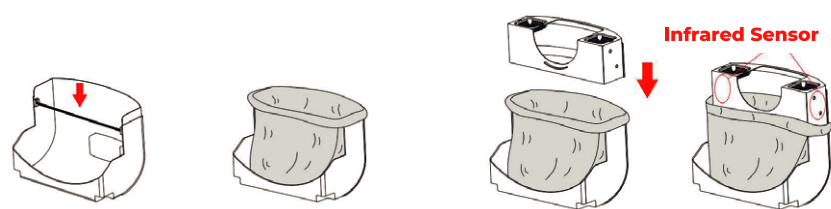

3 Power On

Plug in the adapter to turn on the machine. The device will perform a self-check and will automatically reset once completed.

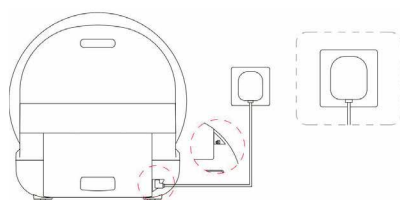


Note : Stand to the side of the machine to avoid the front sensor, which will pause the machine.

4 Adding Cat Litter

Pour the cat litter into the globe and do not exceed the "MAX" line. Suitable cat litter types: bentonite, tofu litter (≤ 1.5 cm), clumping silica litter.

Click the CLEAN once to update the weight information. Do not add litter and make sure the cat is not inside the machine while it is running to avoid affecting the weight data.

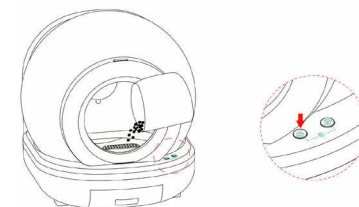


5 APP Connection



Connect the product to "Smart Life" or "Tuya" APP. Hold the CLEAN for 3s, the white light will flash quickly, entering the network configuration mode. Open the App and click on "Add Device". Wait for the automatic search. When the device is found, click "Add". **Note: Only support 2.4GHz network. 5GHz is unavailable.**

6 Disassembly

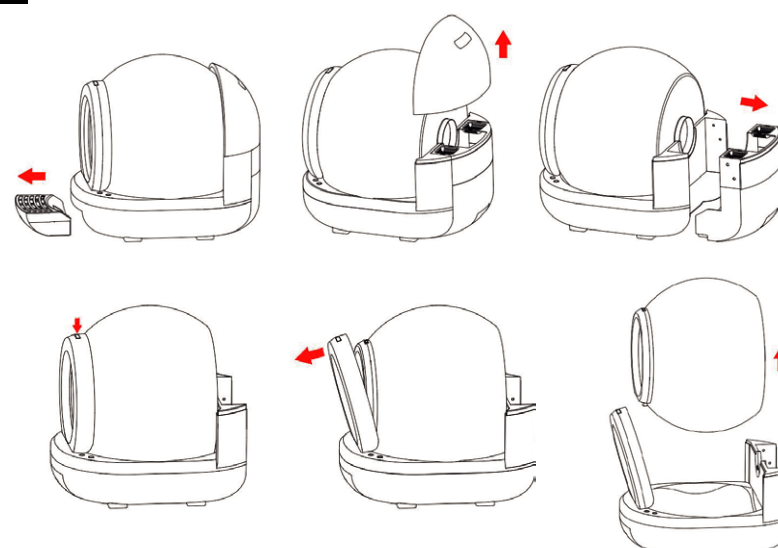



▶ ALARM FEEDBACK & TROUBLESHOOTING

| INDICATOR | ADDITIONAL CONDITION | CAUSES | SOLUTIONS | |
|--|--|--|---|--|
| White Light Slow Flashing Or Fast Flashing | Network connection failed | Connected to 5GHz WiFi | Connected to 2.4GHz WiFi. | |
| | | Faible signal WiFi | Bring the machine closer to the router to connect. | |
| Red Light Slow Flashing Or Steady On | APP reminder, "The waste bin is full, please clean it in time." Or "There are foreign objects at the opening of the waste bin. Please check it." | The waste bin is full. | Replace the garbage bag. | |
| | | The garbage is piled up in the middle, causing the infrared sensor to misjudge. | Pull out the garbage bin and shake it to make the garbage inside the bin flat before re-installing it. | |
| | | The garbage bag covers the sensor. | Make the garbage bag not cover the sensor. | |
| | | The drop port is piled up, causing the sensor to misjudge. | Clean up the piled-up garbage in the drop port. | |
| | | The top cover or the garbage bin is not properly installed, causing the garbage bin to cover the sensor. | Install the garbage bin and garbage bin cover correctly. | |
| | | The infrared sensor is dirty. | To clean the infrared sensor. | |
| Red Light Fast Flashing | APP reminder, "Waste bin (lid) not properly installed." And the product is not operational. | Waste bin is not properly installed. | To properly install the waste bin. | |
| | | Waste bin lid is not properly installed. | To properly install the waste bin lid. | |
| Blue Light Slow Flashing | Weight is not displayed in the APP. | An animal is in front of the machine within 1m, triggering the radar sensor. | When leaving, it will automatically resume after 10s. | |
| | | During machine operation, accidentally pressing the corresponding working button on the machine causes it to enter a pause state. | 1. Deactivated the child lock, click the corresponding button again (press the "Clean" button during the cleaning state, or press the "Clear" button during the litter clearing state). 2. If not manually restored, the machine will automatically resume after 5 min and continue running. | |
| | Weight is displayed in the APP. | A cat enters the machine's interior or the top of the machine. | Take the cat out of the machine. | |
| | | There is a heavy object on the machine or pressure is applied to it. | Remove the heavy object or external force. | |
| | | After adding litter, the "Clean" button was not pressed. | 1. Deactivate the child lock and click the "Clean" button to perform a cleaning circle. 2. Restart the machine by turning off the power and then turning it back on. | |
| The Lights Functioning Normally | The automatic cleaning function is not working, and the weight of the cat is not displayed in the app. | When the machine is moved near the end of its operation, it causes the recorded static weight to be higher than the actual weight. | To restart the machine. | |
| | | When pressure is applied to the machine near the end of its operation, it causes the recorded static weight to be higher than the actual weight. | | |
| | | Uneven or soft ground. | Place it on a hard, flat surface and either click the "Clean" button for a cleaning cycle or turn off and then turn on the machine to restart it. | |